

# Motor Carrier Instructions for Widespan Operations at Intermodal Hubs



***The following is for use at BNSF Logistics Park Chicago, BNSF Logistics Park Kansas City, and BNSF Memphis Intermodal hubs with widespan crane operations. Before you begin, install the BNSF RailPASS mobile app via the Apple App Store, or Google Play Store.***

## Truck Driver Instructions and Responsibilities for Widespan Operations:

- Identify your parking assignment, located in the RailPASS app. If you are assigned an "R" or "S" transfer spot parking location, you will need to get a lift in the widespan crane operation.
- Remove all zip ties from unit before entering widespan live lift area and properly dispose.
- If lifting a container off a chassis: Ensure the container is unlocked from the chassis before entering the R/S-Spot or lift area.
- If placing a container on a chassis: Ensure the chassis locks are in the unlocked position before entering the R/S-Spot or lift area.
- Proceed to the widespan crane area and then to the correct parking assignment. R/S-Spots are numbered accordingly on the ground.
- There are times when a R/S-Spot is unavailable. RailPASS will display a message indicating to proceed to a staging area. Please wait until a spot is available for you. RailPASS will later alert you when an R/S-Spot has been assigned, and you can then proceed to your location.
- While in the widespan area, be aware of any red stop lights where cranes are operating and be sure to stop and wait to proceed once safe to do so.
- When navigating in the R/S-Lane, be sure to park centered in the R/S-Spot designated to you. Failure to do so may result in container placement errors.
- When you find your location and park, set your parking brake.
- If Truck Spot Check-In is available, please check-in on the RailPASS app confirming you are parked in your designated location. This alerts the crane you are ready for a lift.
- Drivers will be processed in order based on request time and availability of spots under the crane.
- **STAY IN YOUR VEHICLE AT ALL TIMES** in the lift area. This is for your safety. Do not walk in or around the stacking area. Lift operations will not be performed if you are outside the vehicle.
- Once your lift is complete, please proceed to a staging area to secure twist locks and front pins if necessary and then proceed to the outgate.

*The following is for use at BNSF Logistics Park Chicago, BNSF Logistics Park Kansas City, and BNSF Memphis Intermodal hubs with widespan crane operations. Before you begin, install the BNSF RailPASS mobile app via the Apple App Store, or Google Play Store.*

## Truck Driver Instructions and Responsibilities for Widespan Operations:

- If any lift adjustments are needed, please proceed to the designated flip area.
- Observe and obey signs directing movement throughout the yard.
- General questions and comments related to the procedures and provisions outlined in this document can be directed to the Driver's Assistance Building.

## Additional Instructions Specific to Logistics Park Kansas City Only:

- Before parking in an assigned R-Spot, ensure a crane is not actively working in an adjacent parking stall. Please wait for crane to finish before proceeding to your spot.
- Spot the nose of the unit or chassis to the appropriate spot line on the ground, based on the size of your equipment: 20-foot, 40-foot, 53-foot as appropriate.